

# Business Lines Guide

# SmartVoice

**TPX**

03/26/2017



# Quick Reference

## CODE FUNCTION

Activate	Feature Access Code Calls	Deactivate
★72	Call Forwarding (Always)	★73
★76	Call Forwarding Busy	★77
★78	Call Forward No Answer	★79
★89	Calling Line ID Delivery Blocking	★88
★94	Call Forwarding Not Reachable	★95
★43	Call Waiting Persistent	★42
★03	Do Not Disturb	★04
★67	Calling Line ID Delivery Blocking Per Call	
★82	Calling Line ID Delivery Per Call	
★31	Call Park	
★34	Call Park Retrieve	
★41	Call Pickup	
★69	Call Return	
★45	Directed Call Pickup	
★66	Last Number Redial	
★70	Cancel Call Waiting	
★54	Flash Call Hold	
★75	Speed Dial 100	
★74	Speed Dial 8	
	<b>Voicemail Features</b>	
★21	Call Forwarding Always to Voicemail	★23
★40	Call Forwarding Busy to Voicemail	★39
★98	Call Forwarding No Answer to Voicemail	★97
★22	No Answer Timer	
★55	Direct Voice Mail Transfer	
★62	Voice Portal Access	

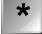

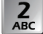
All features are purchased at the time of your service order. To add a feature, contact Customer Care.

# Contents

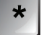

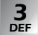
## PG FEATURE

3	Call Forwarding (Always)
3	Call Forwarding Busy
3	Call Forward No Answer
4	Calling Line ID Delivery Blocking
4	Call Forwarding Not Reachable
4	Calling Line ID Delivery Blocking Per Call
4	Calling Line ID Delivery Per Call
4	Call Park
5	Call Park Retrieve
5	Call Pickup
5	Call Return
5	Cancel Call Waiting
5	Directed Call Pickup
5	Flash Call Hold
6	Last Number Redial
6	Speed Dial 100
6	Speed Dial 8
7	Call Waiting Persistent
7	Do Not Disturb
8	Call Transfer
8	Three-way Call
8	Flash Hook
9	Call Forwarding Always to Voicemail
9	Call Forwarding Busy to Voicemail
9	Call Forwarding No Answer to Voicemail
10	No Answer Timer
10	Direct Voice Mail Transfer
10	Voice Portal Access

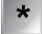


FEATURE ACCESS  
CODE CALLSCall Forwarding  
(Always)[Activation](#)

- ▶ Lift handset. Press the assigned code   
- ▶ Enter phone number to which calls will be forwarded.
- ▶ Replace handset. The service is on.




[Deactivation](#)

- ▶ Lift handset. Press the assigned code   
- ▶ Replace handset. The service is off.



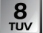
Call Forwarding  
Busy[Activation](#)

- ▶ Lift handset. Press the assigned code   
- ▶ Enter phone number to forward calls when you're on the phone.
- ▶ Replace handset. The service is on.

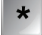

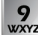
[Deactivation](#)

- ▶ Lift handset. Press the assigned code   
- ▶ Replace handset. The service is off.



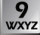
Call Forwarding  
No Answer[Activation](#)

- ▶ Lift handset. Press the assigned code   
- ▶ Enter phone number to forward calls when you do not answer.
- ▶ Replace handset. The service is on.




[Deactivation](#)

- ▶ Lift handset. Press the assigned code   
- ▶ Replace handset. The service is off.


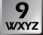

FEATURE ACCESS CODE  
CALLS (cont.)Calling Line ID  
Delivery BlockingActivation

- ▶ Lift handset. Press the assigned code   
- ▶ Replace handset. The service is on for all calls.


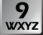
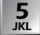
Deactivation

- ▶ Lift handset. Press the assigned code   
- ▶ Replace handset. The service is off for all calls.

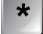


Call Forwarding  
Not ReachableActivation

- ▶ Lift handset. Press the assigned code   
- ▶ Replace handset. The service is on for all calls.

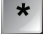

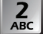
Deactivation

- ▶ Lift handset. Press the assigned code   
- ▶ Replace handset. The service is off for all calls.




Calling Line ID Delivery  
Blocking Per Call

- ▶ Lift handset. Press the assigned code   
- ▶ Dial the phone number.
- ▶ The call is placed, and your calling line ID is not displayed.

Calling Line ID  
Delivery Per Call




- ▶ Lift handset. Press the assigned code   
- ▶ Dial the phone number.
- ▶ The call is placed, and your calling line ID is displayed for this call.

## Call Park




- ▶ Call is established
- ▶ Flash for dial tone. Press the assigned code   
- ▶ Enter extension of phone on which call is to be parked.  
(Must be a valid extension)
- ▶ Replace handset. The call is parked at the indicated extension.
- ▶ If call is not retrieved it will ring back after 45 seconds.

FEATURE ACCESS CODE  
CALLS (cont.)

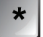
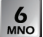
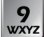
## Call Park Retrieve

- ▶ Lift handset. Press the assigned code   
- ▶ Enter extension of phone on which call was parked.
- ▶ User is connected to call parked on that extension.




## Call Pickup

- ▶ Lift handset. Press the assigned code   
- ▶ The longest-ringing phone in your call pick-up group is connected.




## Call Return

- ▶ Lift handset. Press the assigned code   
- ▶ The last incoming phone number is redialed.




## Cancel Call Waiting

- ▶ Lift handset. Press the assigned code   
- ▶ The Call Waiting service is turned off so that you can make an uninterrupted phone call. The Call Waiting service will be back on after the next outgoing phone call.


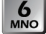
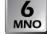
## Directed Call Pickup

- ▶ Lift handset. Press the assigned code   
- ▶ Enter the extension where the call is ringing. You answer the ringing call at the specified extension.

## Flash Call Hold

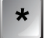

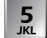

- ▶ Call is established.
- ▶ Flash hook for dial tone. Press assigned code    Dial the number for the second call.
- ▶ Hang up when second call is over and first call will ring back. (This service stops call transfer.)

FEATURE ACCESS CODE  
CALLS (cont.)Last Number  
Redial


- ▶ Lift handset. Press the assigned code   .
- ▶ The last outgoing phone number is redialed.

## Speed Dial 100

To program:





- ▶ Lift handset. Press the assigned feature code   , followed by the two-digit code that will represent the number you want to program, followed by the complete number. (There is no prompt for numbers)
- ▶ Press . An announcement will verify the speed number programming succeeded.

To use:

- ▶ Lift handset.
- ▶ Enter the prefix set for the Speed Dial 100 service (  ) followed by the two-digit code representing the number you want to dial. The speed number is dialed.

## Speed Dial 8

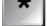
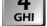
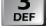
To program:

- ▶ Lift handset. Press the assigned code   , followed by the one-digit code (2 thru 9) that will represent the number you want to program, followed by the complete number. (There is no prompt for numbers)
- 2. Press the  key. An announcement will verify the speed number programming succeeded.


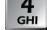
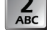
To use:

- ▶ Lift handset.
- ▶ At the dial tone, enter the one-digit code representing the number you want to dial. The speed number is dialed.

FEATURE ACCESS CODE  
CALLS (cont.)Call Waiting  
PersistentActivation

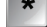
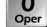
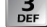
- ▶ Lift handset. Press the assigned code   .
- ▶ An announcement will verify call waiting is enabled.
- ▶ Replace handset. The service is on.

Deactivation

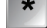
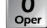

- ▶ Lift handset. Press the assigned code   .
- ▶ An announcement will verify call waiting is disabled.
- ▶ Replace handset. The service is off.

## Do Not Disturb

Activation

- ▶ Lift handset. Press the assigned code   .
- ▶ An announcement will verify Do Not Disturb is active.
- ▶ Incoming calls will receive a busy signal.

Deactivation

- ▶ Lift handset. Press the assigned code   .
- ▶ An announcement will verify Do Not Disturb is deactivated.
- ▶ Incoming calls will ring in normally.


FLASH  
CALLS

Note: Flash calls are available on devices with flash functionality.

## Call Transfer

While engaged in call to be transferred:

- ▶ Press flash-hook on phone. The initial call is held.
- ▶ Enter the complete phone number or extension of party to receive call.


You can press  to signal the end of the phone number or extension.

- ▶ All parties are connected.
- ▶ Hang up handset to drop out of the call and connect the other two parties.

## Three-Way Call

The Three-Way Call service must be assigned. While engaged in one call:

- ▶ Press flash-hook on phone. The initial call is held.
- ▶ Enter the complete phone number or extension of third party.

You can press  to signal the end of the phone number or extension.

- ▶ When the call is connected, press flash-hook again. All parties are connected in a three-way call.
- ▶ To drop the add-on party, press the flash-hook again.

Note: If either of the two other parties hangs up, your call with the remaining party is intact. If you hang up, the other two parties remain connected.

## Flash-Hook

While engaged in one call:




- ▶ Press flash-hook on phone.
- ▶ You can make a second call and toggle between calls by pressing the flash-hook.






VOICEMAIL  
FEATURES

Note: User must have an active Voicemail account to use the following features.




Call Forwarding  
Always to VoicemailActivation

- ▶ Lift handset. Press the assigned code   .
- ▶ An announcement will verify calls will go directly to VM.
- ▶ Replace handset. The service is on.




Deactivation

- ▶ Lift handset. Press the assigned code   .
- ▶ An announcement will verify calls will not go directly to VM.
- ▶ Replace handset. The service is off.




Call Forwarding  
Busy to VoicemailActivation

- ▶ Lift handset. Press the assigned code   .
- ▶ An announcement will verify calls will go to VM.
- ▶ Replace handset. The service is on.




Deactivation

- ▶ Lift handset. Press the assigned code   .
- ▶ An announcement will verify calls will not go to VM.
- ▶ Replace handset. The service is off.

Call Forwarding  
No Answer to  
VoicemailActivation




- ▶ Lift handset. Press the assigned code   .
- ▶ An announcement will verify calls will go to VM when you do not answer.
- ▶ Replace handset. The service is on.

Deactivation

- ▶ Lift handset. Press the assigned code   .
- ▶ An announcement will verify calls will not go to VM when you do not answer.
- ▶ Replace handset. The service is off.

VOICEMAIL  
FEATURES (cont.)



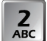
## No Answer Timer

- ▶ Lift handset. Press the assigned code   .
- ▶ An announcement will ask you to enter the number of rings before the system applies no answer handling to your incoming calls. (Valid choices are 0, 2, 3, 4, 5 and 6).

Direct Voice Mail  
Transfer

- ▶ Call is established
- ▶ Flash hook for dial tone.
- ▶ Press the assigned code   . You will hear an announcement to press pound or hang up to transfer the call to your voicemail box.

Voice Portal  
Access

- ▶ Lift handset. Press the assigned code s   .
- ▶ You are connected to the Voice Mail menu system.